

Add a Room

Instructions



Part 1 Setting up the Roll Out Awning

The Roll Out Awning is erected easily in a matter of minutes and can be attached to both Pop Tops and Caravans.

If your Roll Out Awning is attached to a Pop Top pop the roof up first then follow the rest of these instructions.

Level your Pop Top or Caravan by finding a level surface on the van close to the wheels then adjusting jockey wheel.



1. Slowly pull black cord on R.O.A to release the canvas, ensuring that the barrel is set to OPEN before pulling the cord




2. Unlock the awnings stabilising arms and slide away from the van until they lock in place. Repeat on opposite side of awning.





Available through
Prestige Jayco
Geelong:
182 Bellarine Hwy,
Newcomb Vic 3219
Bendigo:
366 High St,
Kangaroo Flat Vic 3555

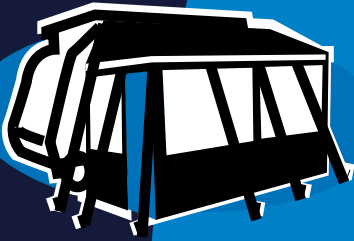

Instructions

Part 1 Setting up the Roll Out Awning

3. Unlock the lever on awning arm and slide up past the black arrow, approx 3 holes, and lock into place.
4. Detach studs from locks and move away from the van to erect the awning. Repeat on opposite side.



5. Line up black line on horizontal bar (this bar is angled on the caravan) and tighten in place. Repeat on other side.



6. Line up the awning arms so they run parallel to the caravan and each other and peg down. Now release lever on the arm and lower to line up with black arrow. Lock and repeat on opposite side.



7. To tighten canvas, move the barrel lever to CLOSE. After turning complete return to Open.

Finally, remove the strap from barrel.

NOTE: Refer to Jayco Owners Manual for additional instructions.



Add a Room



Instructions Part 2 Setting up the Add A Room

Add a Rooms attach and dismantle with ease. After erecting your Roll Out Awning the following steps will assist in setting up you Add a Room.



1. To attach the side walls, slide the large canvas walls piping into groove on the Roll Out Awning barrell ensuring coloured side is facing away from your Pop Top or Caravan.



2. To attach the end walls, take out the two straight poles* and slide through top pocket provided in canvas side wall. Ensure the poles are visible at each end with the bracket fitting van side.



** There should only be two straight poles with a bracket fitting one end and pin the other.*



Available through
Prestige Jayco
Geelong:
182 Bellarine Hwy,
Newcomb Vic 3219
Bendigo:
366 High St,
Kangaroo Flat Vic 3555

Add a Room **PRESTIGE** Jayco



Instructions Part 2 Setting up the Add A Room

3. Feed the wall down the track on your van (start from top) - Pull down until taut.



4. To attach the end wall to the van, firstly, hook the flat blade end of the pole into wall bracket on van.



5. Insert the opposite pole ends pin into the top hole in the roll out awning barrel. Ensure the canvas is spread out and even along the pole. Tension and tighten.



6. Zip side wall to front wall, repeat on opposite side.



PRESTIGE
Jayco 

Available through
Prestige Jayco


Geelong:

182 Bellarine Hwy,
Newcomb Vic 3219

Bendigo:

366 High St,
Kangaroo Flat Vic 3555

Add a Room **PRESTIGE** Jayco

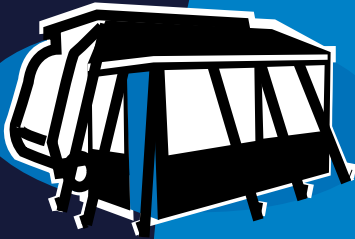

Instructions Part 2 Setting up the Add A Room

7. Attach Jag clips to awning



8. The curved roof poles can now be extended and put in place. When in place, tighten screw.



9. Clip tapes around leg bar.



10. Poles will clip onto the straight end wall pole and twist lock.



PRESTIGE
Jayco 

Available through
Prestige Jayco
Geelong:
182 Bellarine Hwy,
Newcomb Vic 3219
Bendigo:
366 High St,
Kangaroo Flat Vic 3555

Add a Room **PRESTIGE** Jayco



Instructions Part 2 Setting up the Add A Room

11. If you have a Pop Top ensure top Velcro on walls is secure to Pop Top wall.



12. The draft strip can be attached by clipping it onto van.



13. Velcro on the draft strip ends can now be attached to side walls.



14. Finally, the walls of the addaroom can be pegged in place. Double check everything is safe and secure, Velcro is in place and awning screws/latches are tight.



PRESTIGE
Jayco 

Available through
Prestige Jayco

Geelong:
182 Bellarine Hwy,
Newcomb Vic 3219

Bendigo:
366 High St,
Kangaroo Flat Vic 3555