

Bag Awning & Walls

PRESTIGE
Jayco 



Instructions

Very quick and easy to erect with only the best quality material available used.

Awning made from one piece of material so no leakage or seams. Heavy duty zips installed for provision to add Awning walls.

All poles powder coated white. Centre awning pole included for reliable water run off. Canvas side panels attach securely to convert awning into a complete annexe.



1. Before setting up release awning & bed flies from zip bag and wind up roof.



2. Insert square centre rafter arms - first on last off when establishing awning roof.



3. Insert round roof bar to roof rail bracket, extended pole & 'C' hook onto aluminium, bar in awning.




PRESTIGE
Jayco 

Available through
Prestige Jayco
Geelong:
182 Bellarine Hwy,
Newcomb Vic 3219


Bendigo:
366 High St,
Kangaroo Flat Vic 3555

Bag Awning & Walls

Instructions

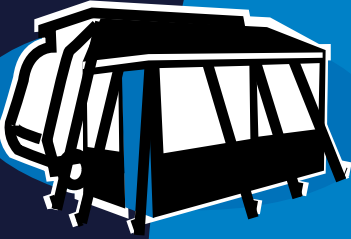

4. Feed upright pole through hole in awning bar.

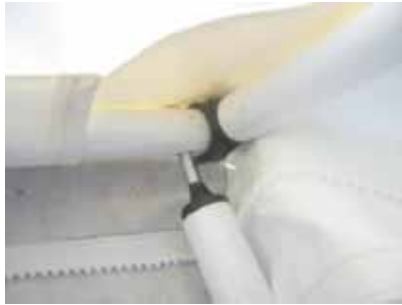

5. Attach guy rope to spigot on outside.



6. Fully erect with support poles & ropes.

7. Velcro flap around raiser arm.



8. Zip three walls onto awning.


9. Slide track down runner.



Available through
Prestige Jayco
Geelong:
182 Bellarine Hwy,
Newcomb Vic 3219
Bendigo:
366 High St,
Kangaroo Flat Vic 3555

Bag Awning & Walls

Instructions

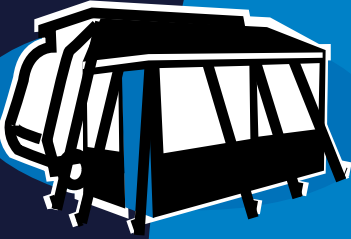

10. Velcro wall flap around wind up pillar of van.



11. Centre pillar awning parallel pole. Peg walls down when you have slipped all walls on. Tension all bars and tighten guy ropes.



Available through
Prestige Jayco

Geelong:

182 Bellarine Hwy,
Newcomb Vic 3219

Bendigo:

366 High St,
Kangaroo Flat Vic 3555

NOTE: Refer to Jayco Owners Manual for additional instructions.